


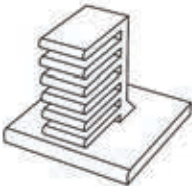


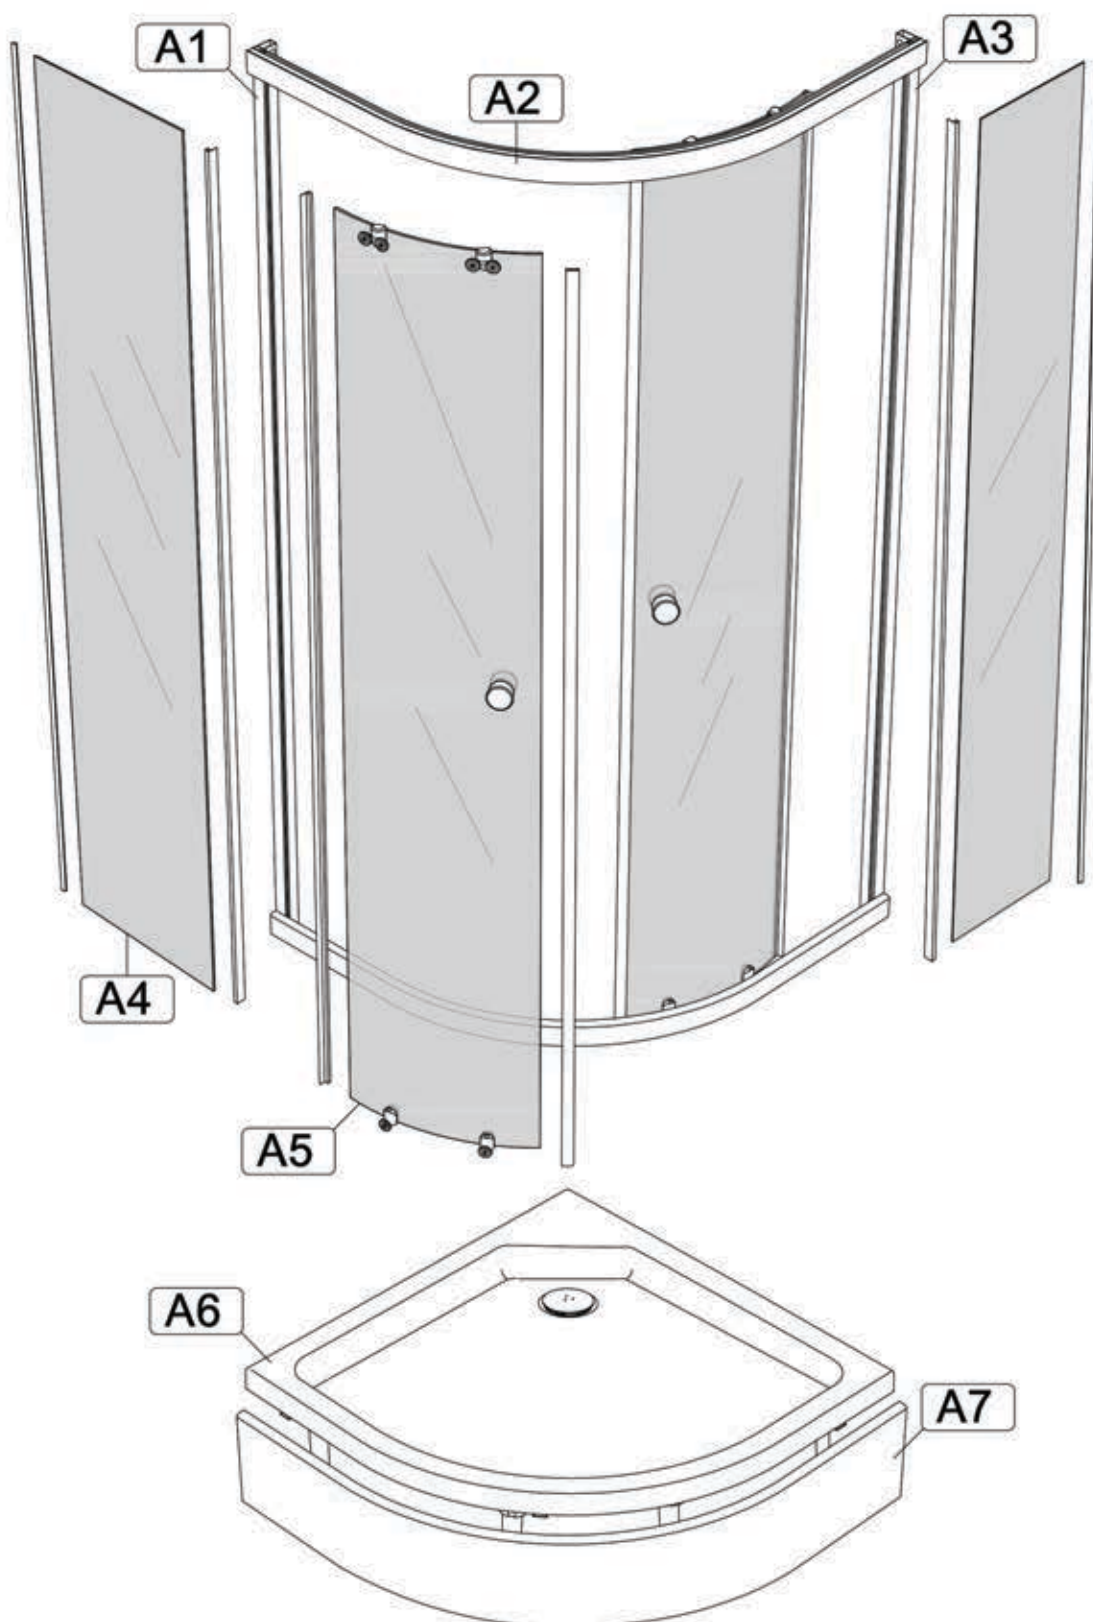




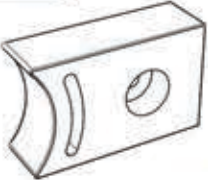







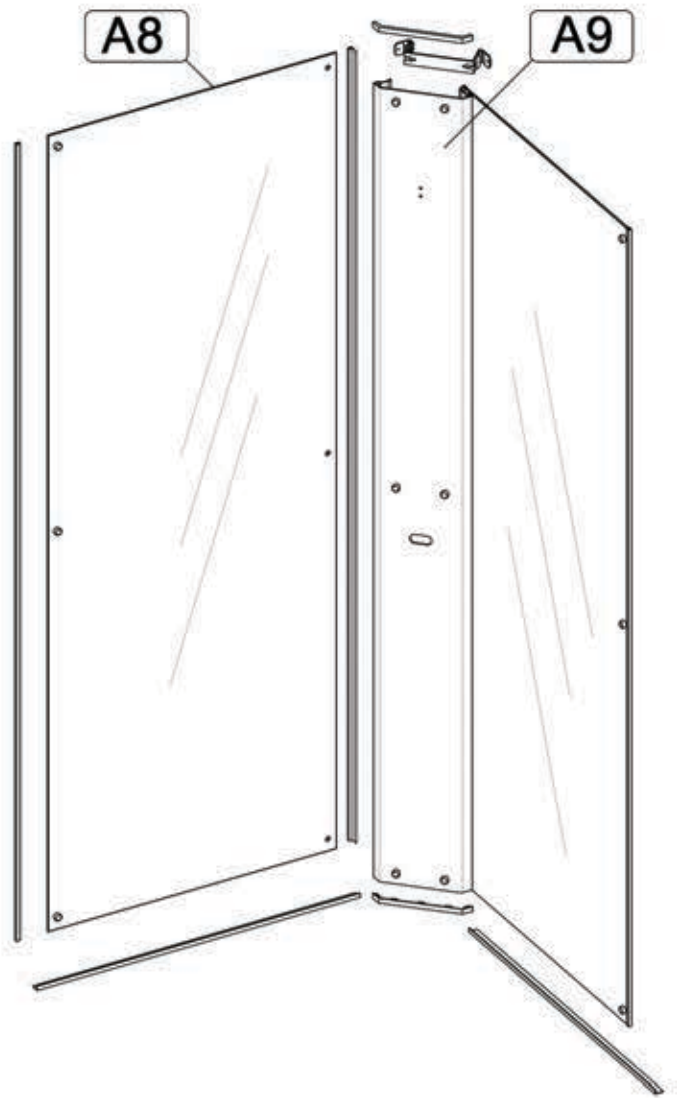











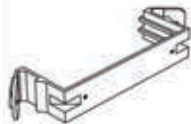


Инструкция по сборке душевой кабины

ГИДРУС/РИО





<b>B1</b> 	<b>B2</b> 	<b>B3</b> 		
<b>B4</b> 	<b>B5</b> 3.5x50 	<b>B6</b> 3.5x19 	<b>B7</b> 3.5x19 	<b>B8</b> 3.5x12 
<b>B9</b> 6x50 	<b>B10</b> 	<b>B11</b> 	<b>B12</b> 	<b>B13</b> 
<b>B14</b> 	<b>B15</b> 	<b>B16</b> 	<b>B17</b> 	<b>B18</b> 



<b>B19</b> 	<b>B20</b> 			
<b>B21</b> 	<b>B22</b> 	<b>B23</b> 	<b>B24</b> 3.5x19 	<b>B25</b> 3.5x15 
<b>B26</b> M3.5 	<b>B27</b> 	<b>B28</b> 	<b>B29</b> 	<b>B30</b> 




A6

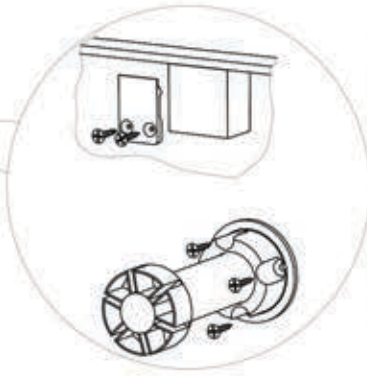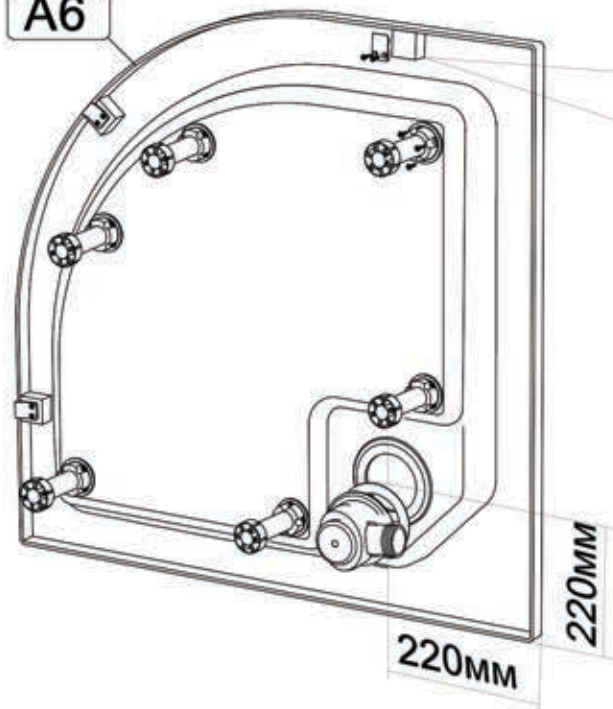


B1  
B7



B2  
B7





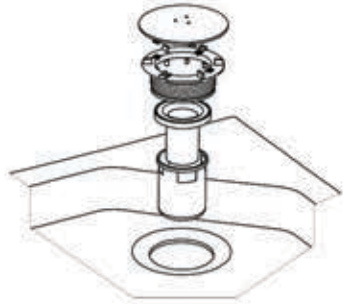



A6 A2

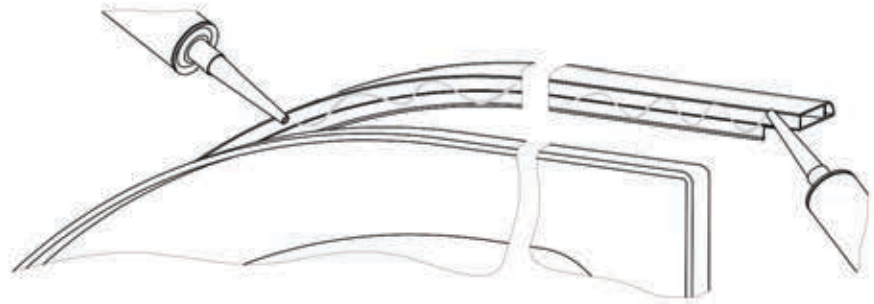






B4  
B6



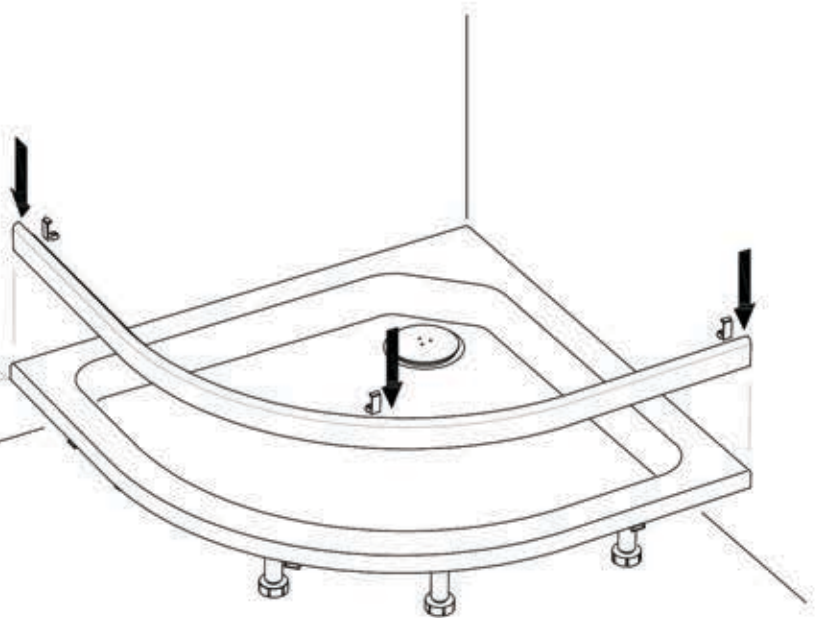
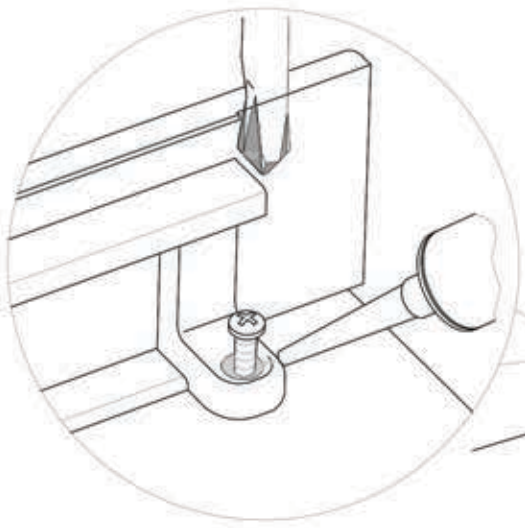


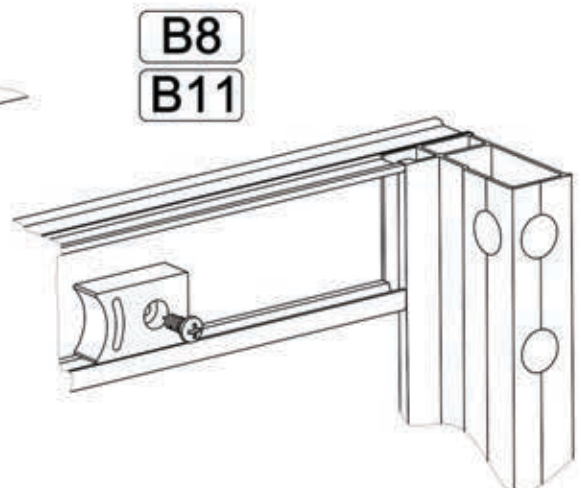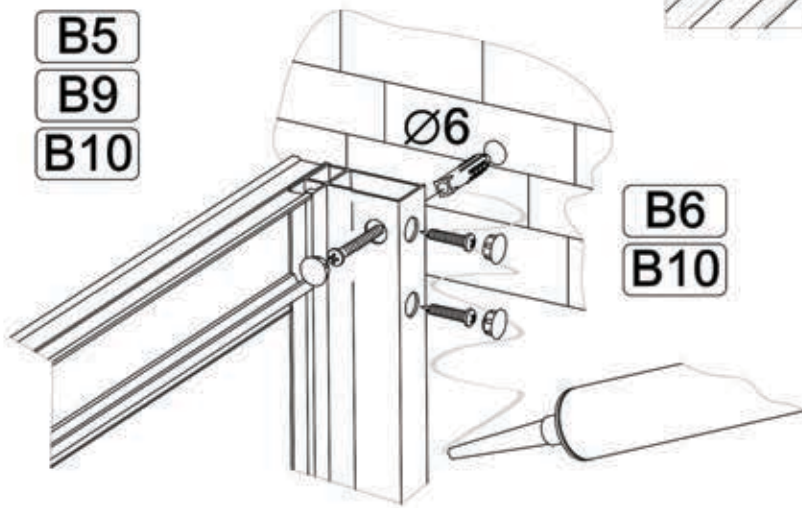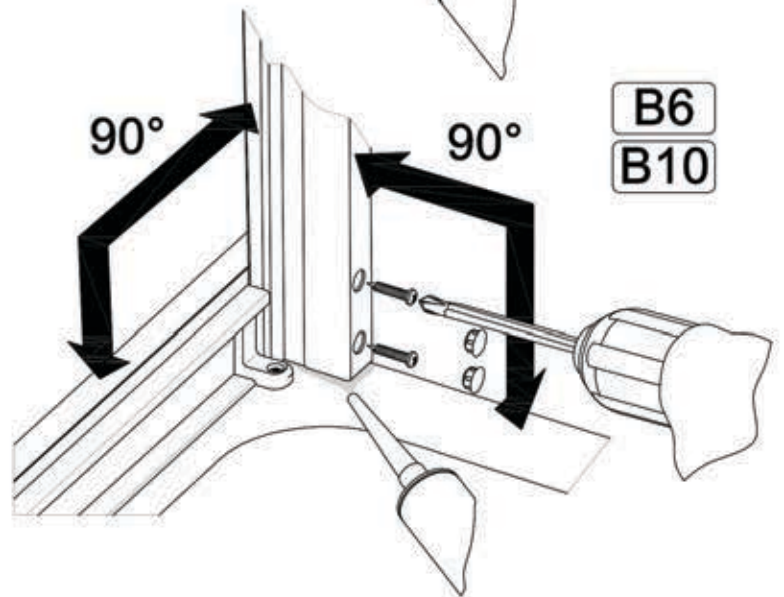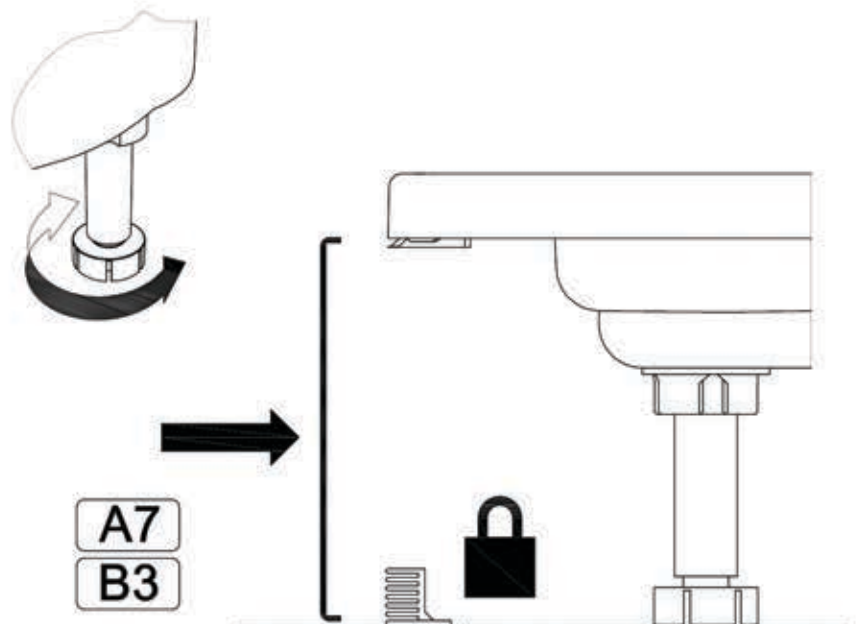
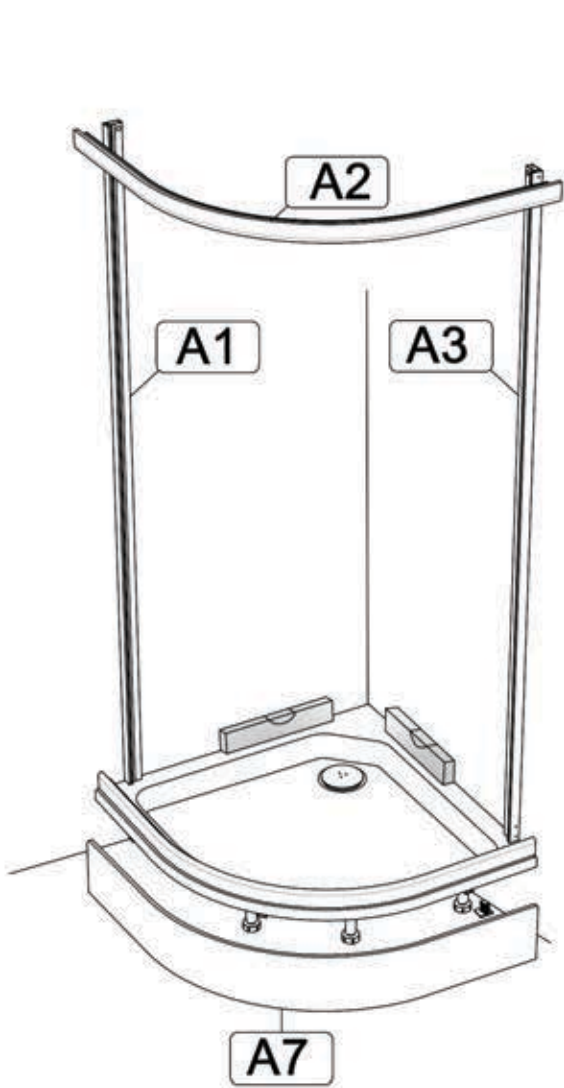


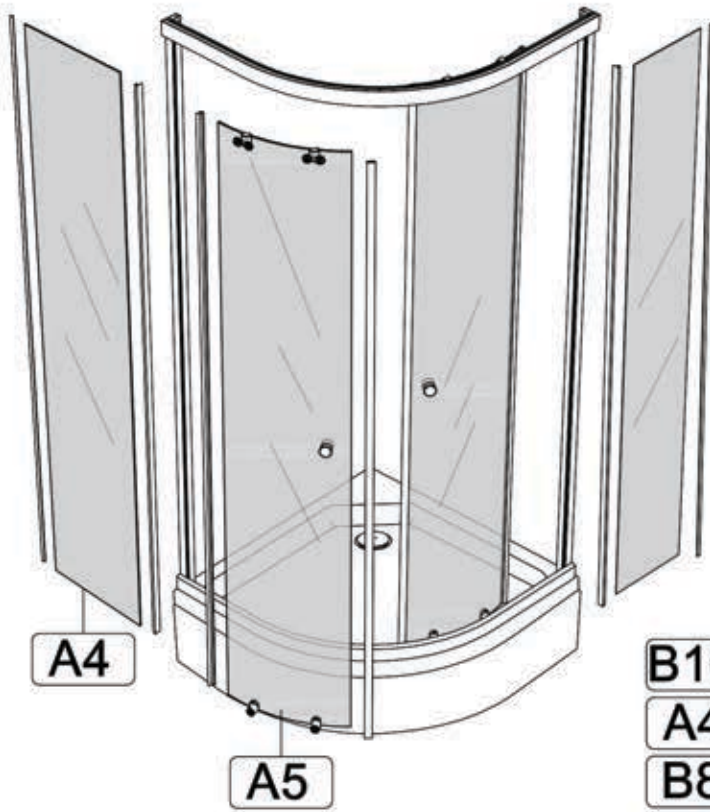

- B16 ✂
- A4
- B8
- B12

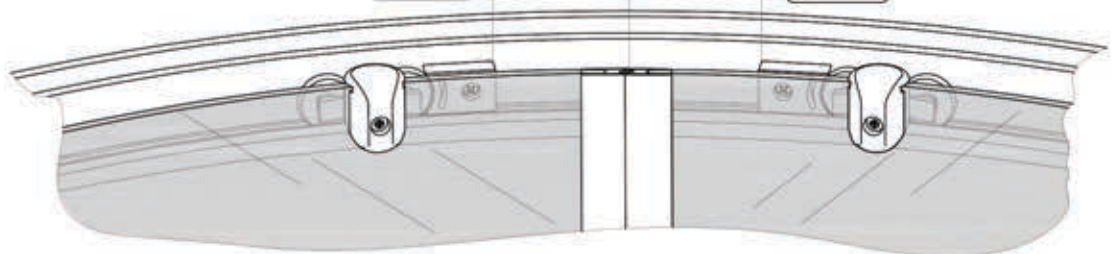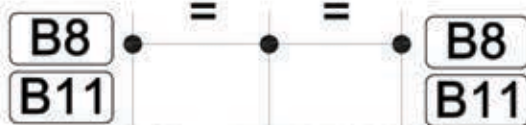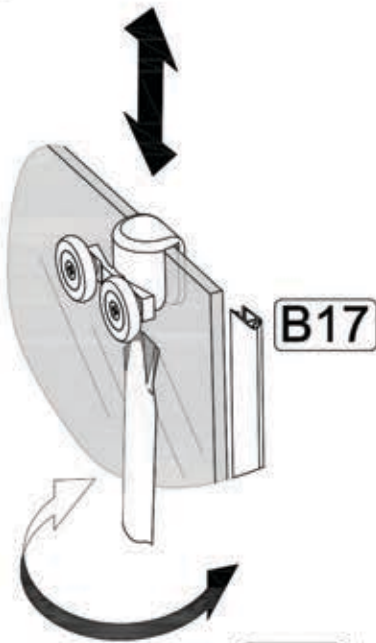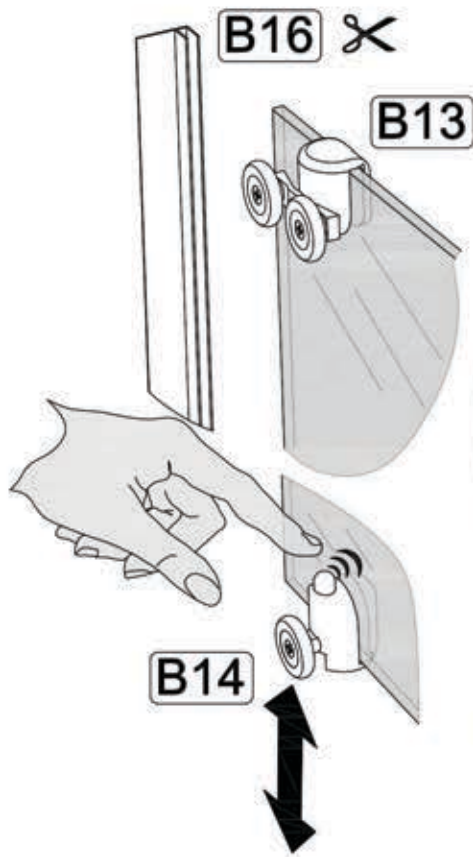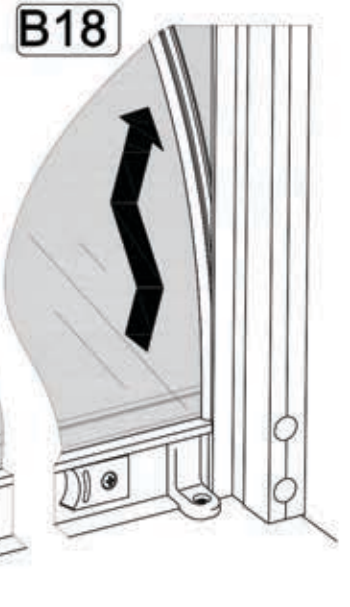

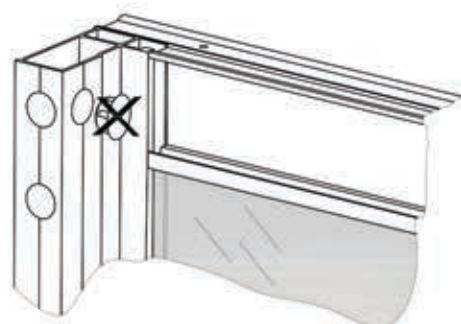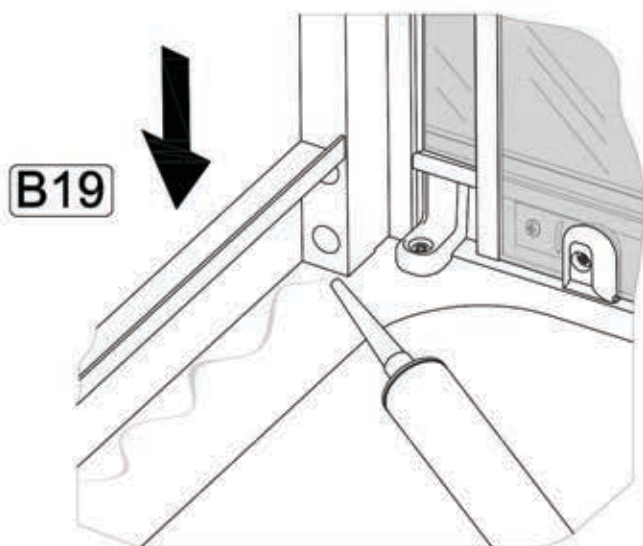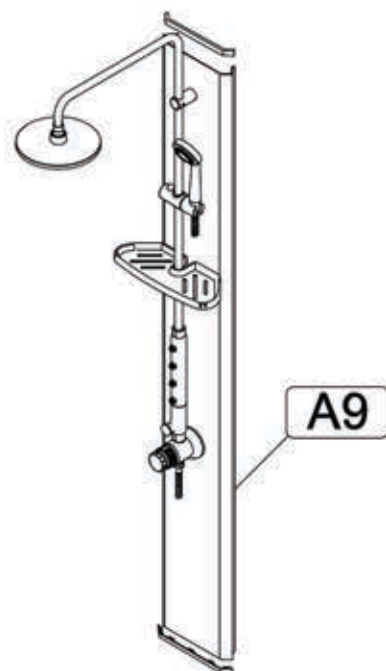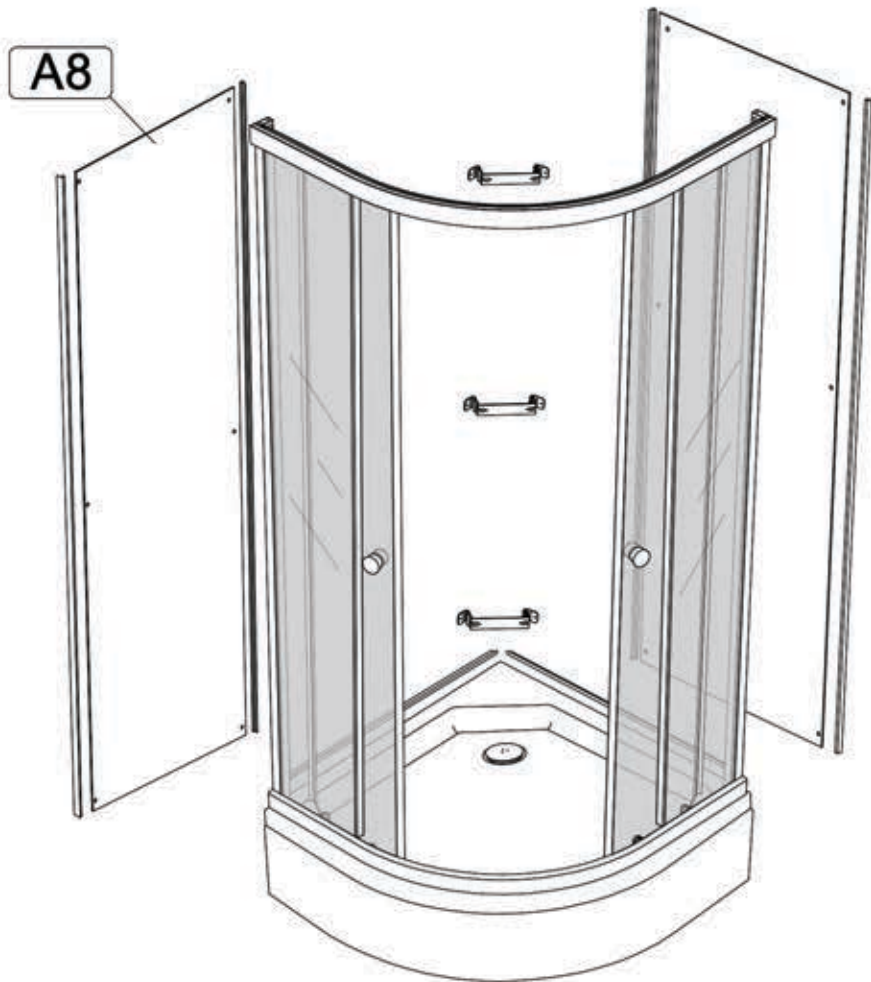


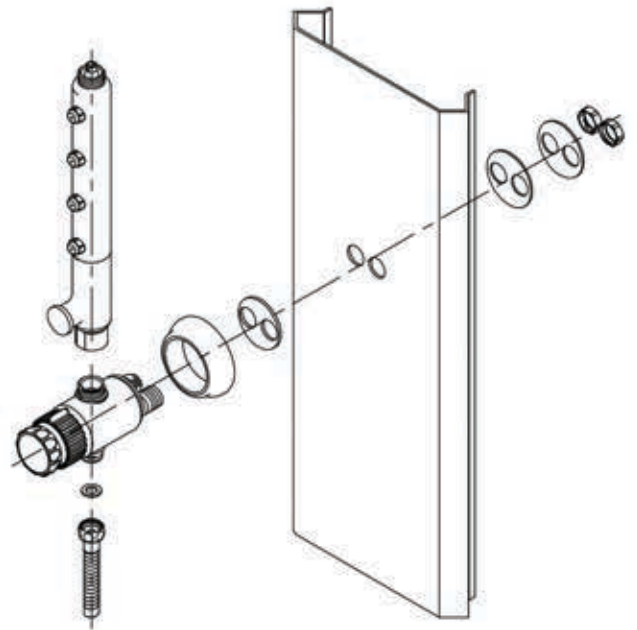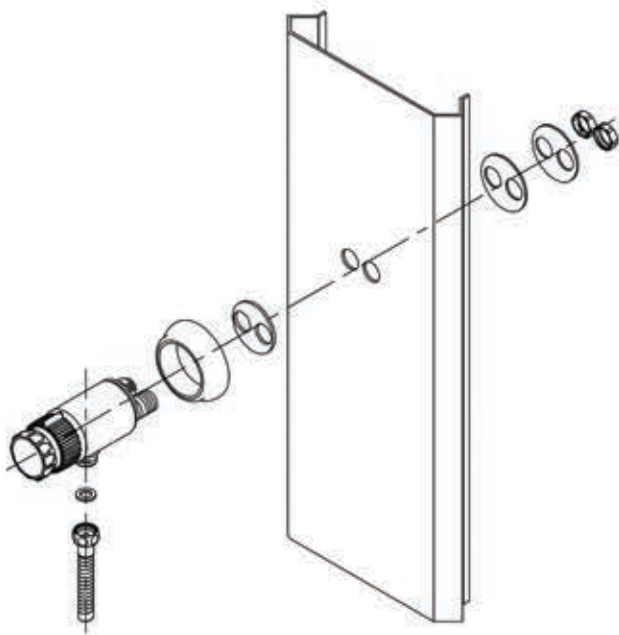


**ЭКО**  
**B3005**

**СТАНДАРТ**  
**B2005**


**ЛЮКС**  
**B2005M**

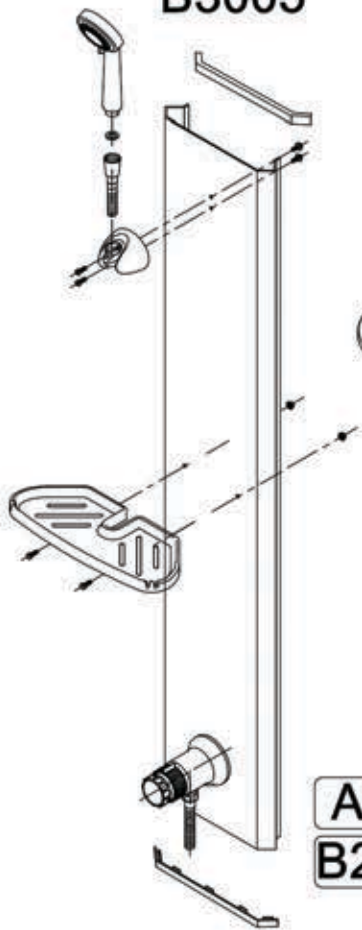

**A9**  
**B22**


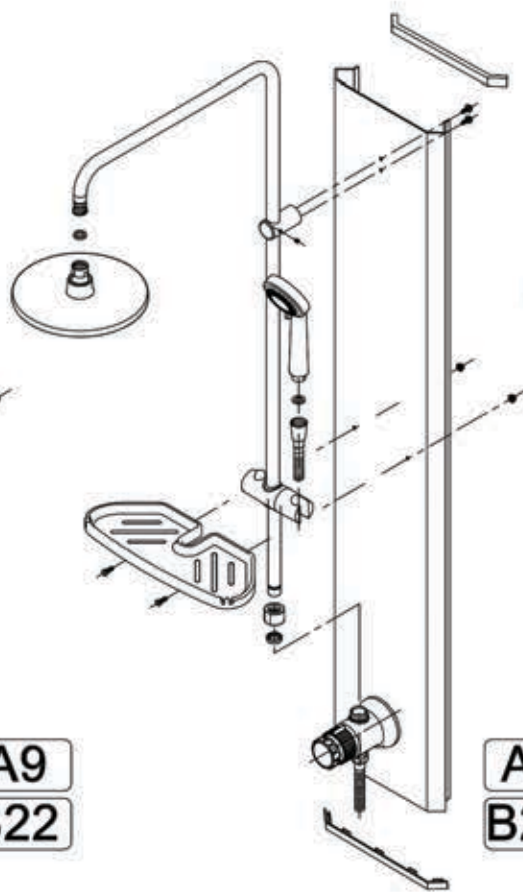


**A9**  
**B22**


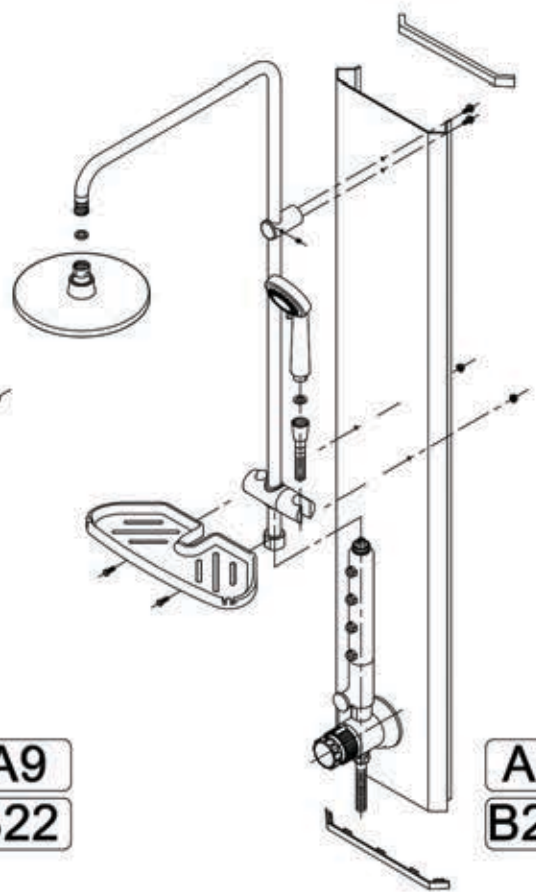






**A9**  
**B22**







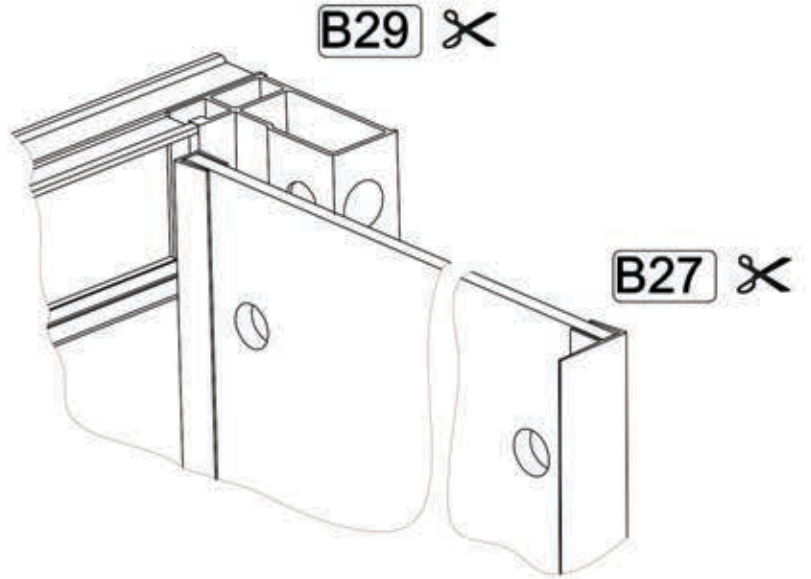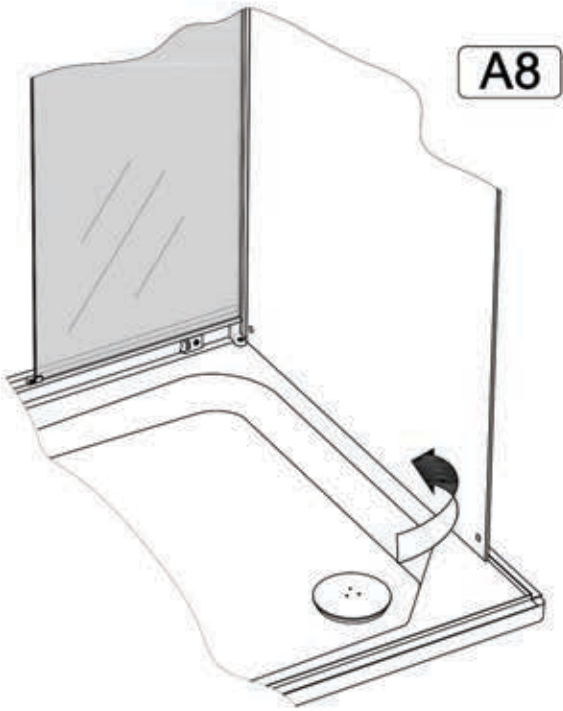

- B21
- B22
- B24

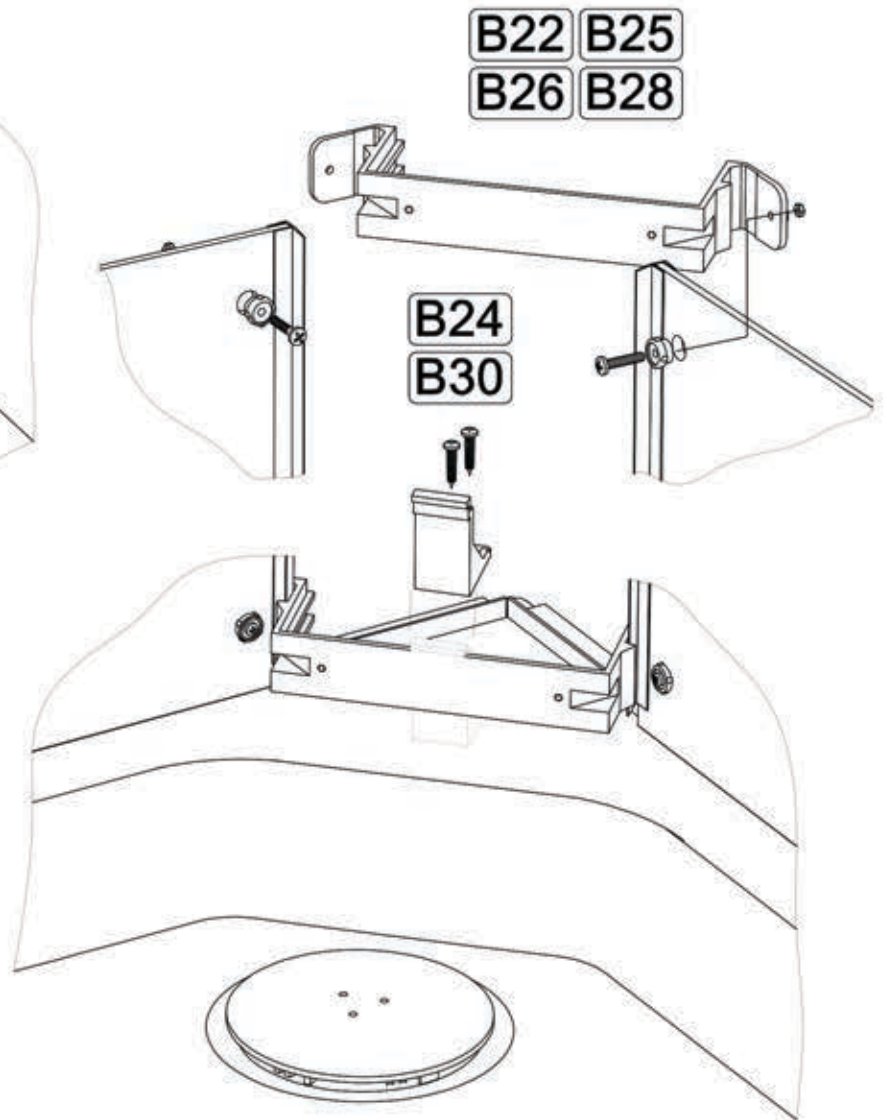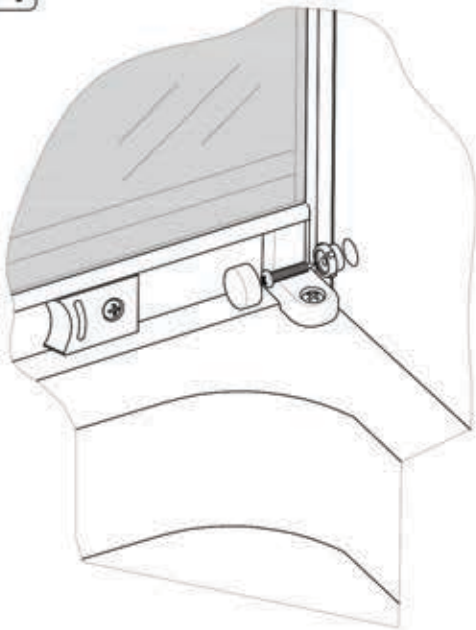

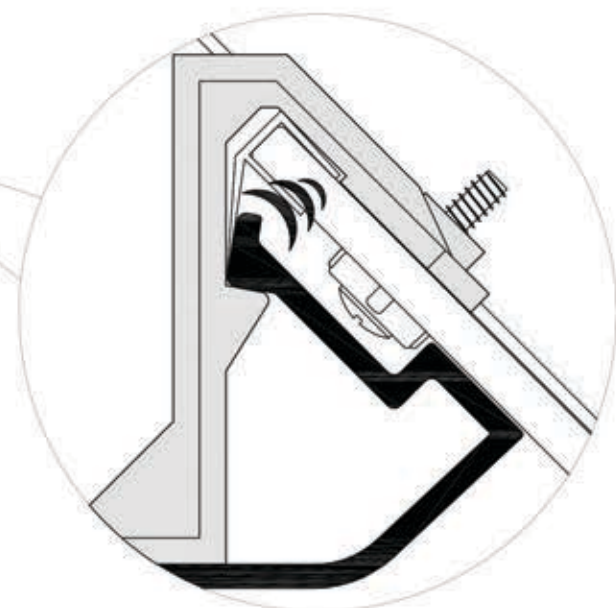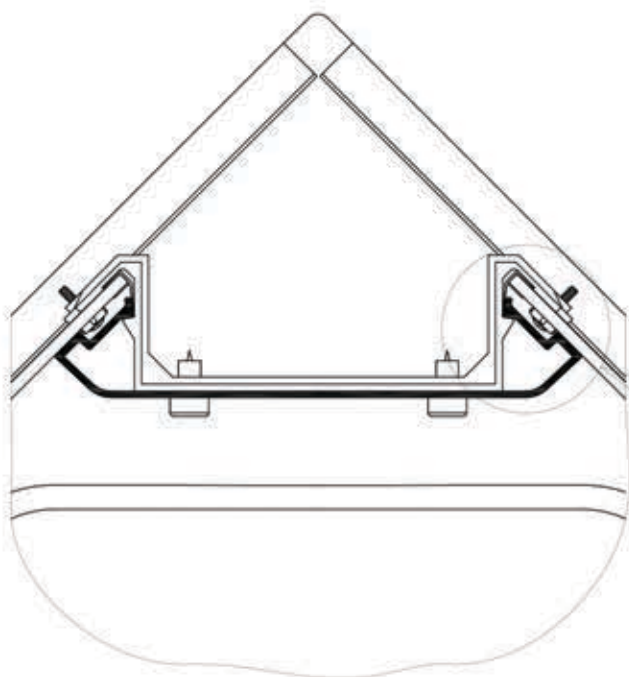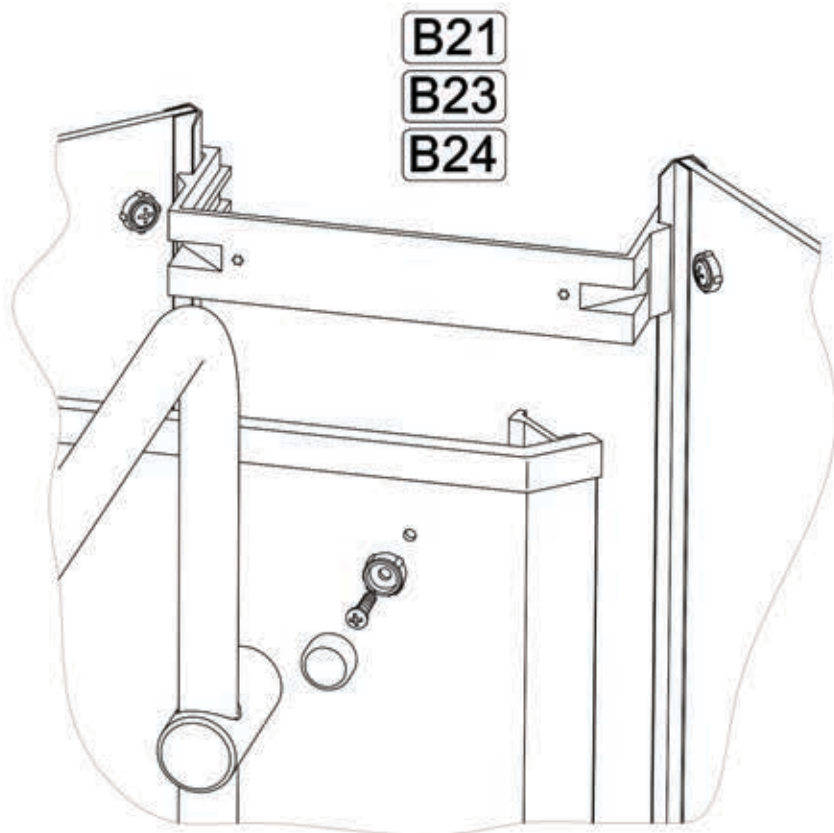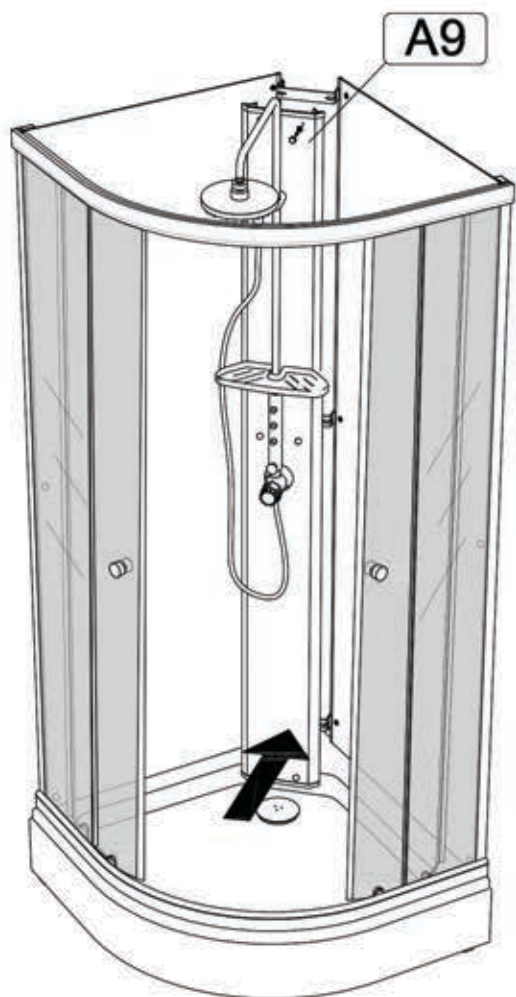

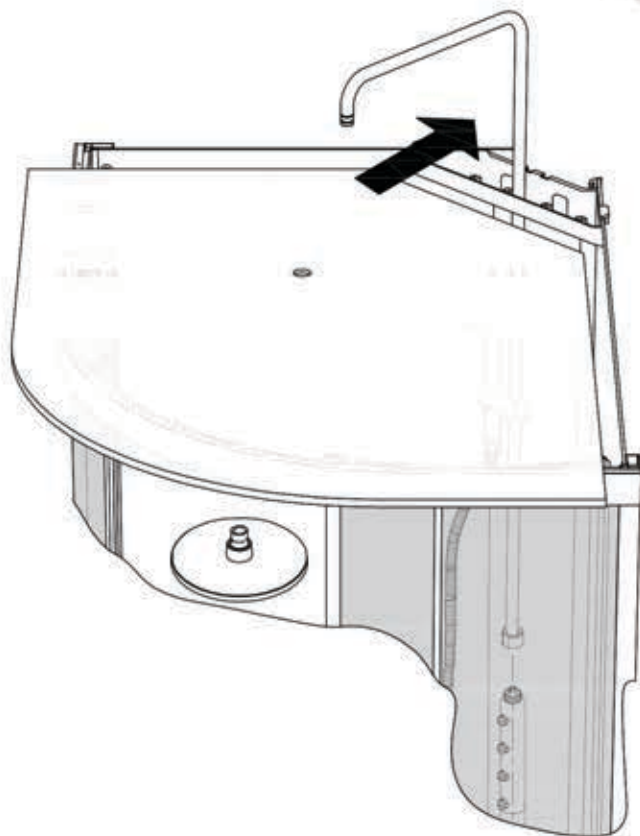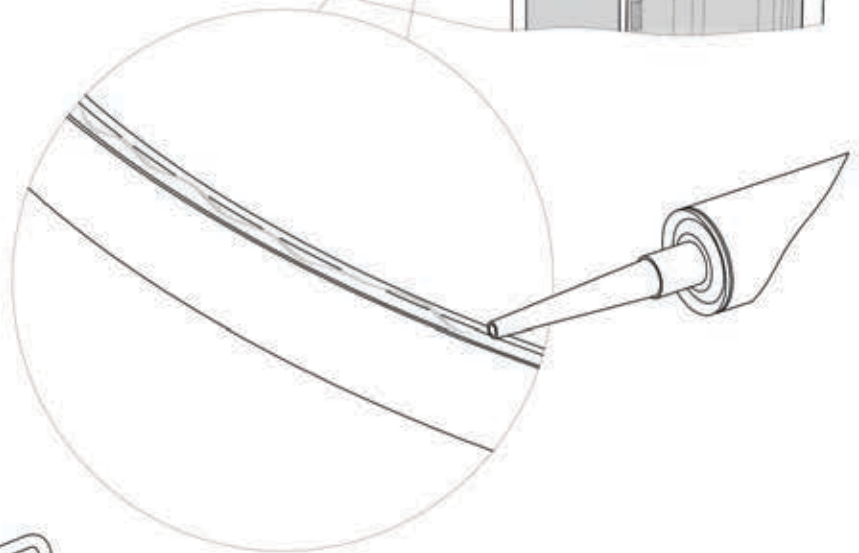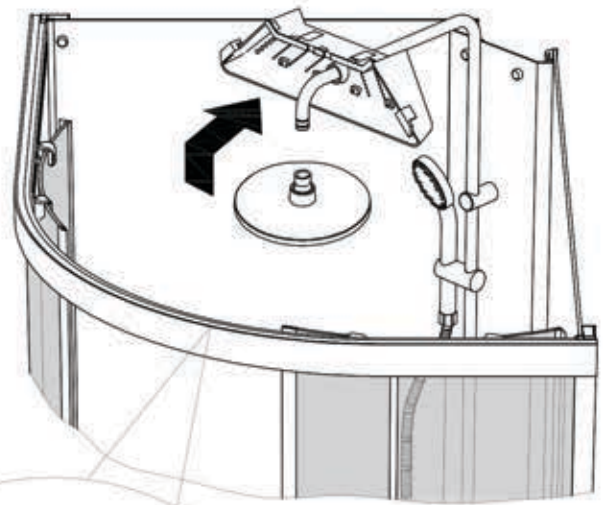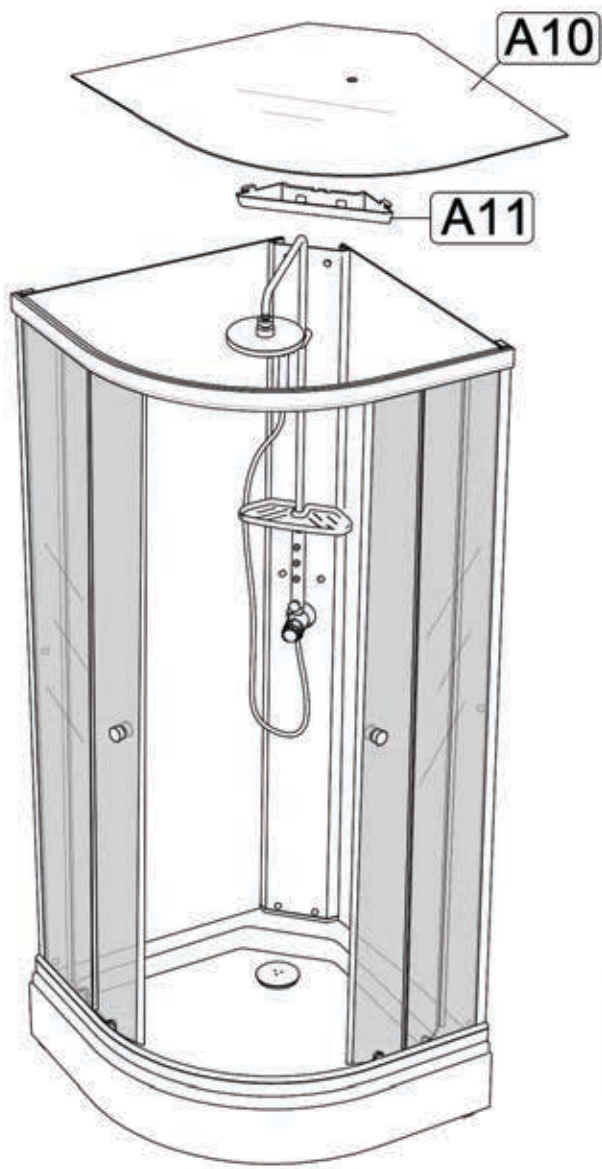

[www.3tn.ru](http://www.3tn.ru)